



Valliscó

WELCOME

Thank you for choosing our company's products. To ensure proper installation and use of this product, please read this manual carefully and keep it in a safe place for future reference.

IMPORTANT TIPS

1. In accordance with local regulations and product guidelines, please refrain from disassembling or tampering with the electronic circuits. Any product issues or damages resulting from such actions are not the responsibility of the brand or seller.
2. Do not disassemble or clean this product with water without proper authorization, as this may cause damage.
3. To clean the fan, please remove the entire unit and use a dry brush and hair dryer for cleaning. Thank you!

BEFORE INSTALLATION

1. Verify that the package is complete and ensure all parts are included.
2. Confirm that the fan size is compatible with your duct opening.
3. Test the fan to ensure it is functioning properly when plugged in.



Parts

| Name | ①Machine | ②Panel | ③Cable tie | ④Remote control | ⑤Check valve | ⑥Manual | ⑦Screw | ⑧Ventilation pipe | ⑨The conversion frame |
|--------|----------|--------|------------|-----------------|--------------|---------|--------|-------------------|-----------------------|
| Amount | 1 | 1 | 2 | 1 | 1 | 1 | 4 | 1 | 1 |

⑤ **Check valve:** If your home does not have a pre-installed exhaust duct and is close to the wall, you may drill a hole according to the size of our air valve.

Note: The following parameters are for reference only. For accurate details, please refer to the specifications listed on the product nameplate.

| Series No. | Machine Size | Panel Size | V/Hz | Air Velocity | Noise |
|-----------------|-----------------|-------------------|---------------|----------------|------------------------------|
| HKJC-4H1YB2600W | 11.81" x 23.62" | 12.4" x 24.21" | 110V,60Hz | 190 CFM | ≤35dB |
| Rated Power | Heating Power | Ventilation Power | Blowing Power | Lighting Power | Diameter Of Ventilation Duct |
| 1800W | 1700W | 25W | 40W | 12W | 4" |


INSTALLATION

- Note:
1. Please read the instructions carefully before installation.
 2. Installation and wiring shall be completed by professional electricians.
 3. Be sure to cut off the power supply before installation to prevent electric shock.

STEP 1

Connect the panel ② to the machine ①. (Before testing the machine, it is necessary to connect the panel for functional testing)



Pairing Code: After the machine is powered on, press and hold the “” button on the remote control ④ for more than 2 seconds to enter the pairing mode. Keep the button pressed, then power on the main unit. When you hear a "beep" sound, the pairing is successful. Then, use the buttons to test all functions of the main unit.

STEP 2

Perform a power-on and code-matching function test. After confirming that the test is successful, disconnect the panel from the main unit. (After testing, please remove the panel to facilitate subsequent installation.)



Power-on



Testing

STEP 3

 
Use tools to secure the ventilation pipe⑧ to the air outlet with Cable tie③ and fasten it in place.



Tip: Due to the specially designed air outlet for increased wind speed, please ensure to follow the steps to connect the ventilation duct provided inside, and then connect it to the pre-installed ventilation duct in the house to avoid any incompatibility issues.

STEP 4

Use tools to cut a 24.02*12.20 inches opening on the top.

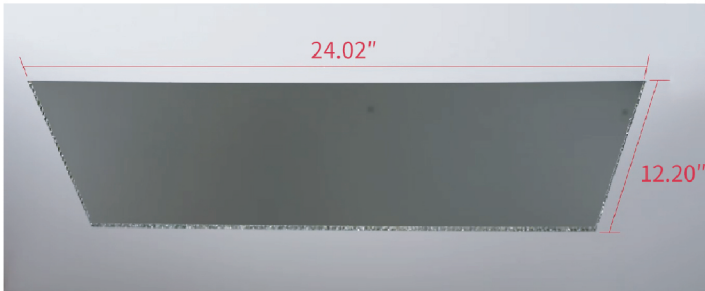

STEP 7

Use a power socket to connect the power supply.

Tip: If there is no power socket in your home and you need to connect the power cable directly, please have a professional handle the installation. Cut off the plug and connect the wires as follows:

Black wire: Live wire (L)

White wire: Neutral wire (N)

Green wire: Ground wire (G).



STEP 8

Tilt the machine ① and place it into the upper opening, and place the four support feet onto the conversion frame.



STEP 9

 
 
Correctly connect the panel to the main unit to ensure the machine can operate safely.



Check Orientation:
Ensure the ventilation grille on the panel is aligned with the air outlet (black part) on the host for proper airflow.

REMOTE CONTROL

The remote control can be fixed to the wall with adhesive or nails.

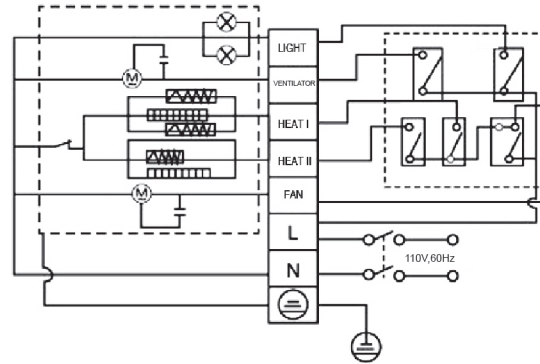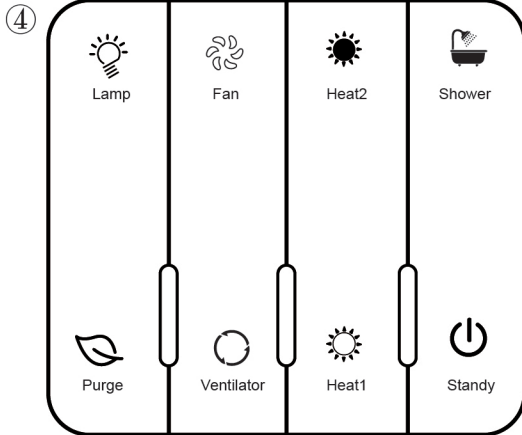

Electrical wiring diagrams

 


Standby: Turn off all functions except lighting. If the warm air runs for 30 seconds, the fan will turn off intelligently.




Lamp: Turn lighting on or off.

REMOTE CONTROL

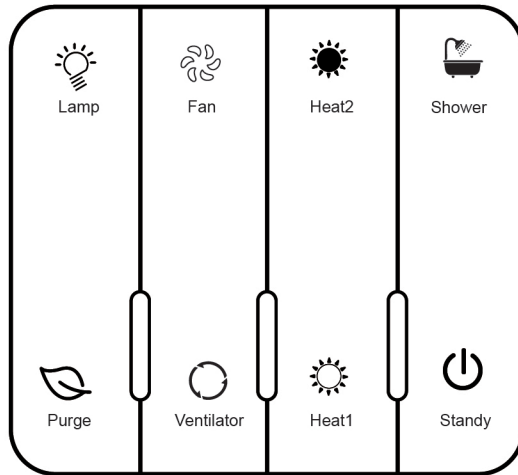

 Fan: air supply mode, such as with swing leaf open at the same time.




Heat1/Heat2 : Turn on the warm air function, and the blowing function starts automatically. Turn off the warm air function and turn it off intelligently after blowing for 30 seconds.



Shower: Turn on the warm air + lighting function, and the blower function will start automatically. Turn off the bath function, turn off the air intelligently after 30 seconds, and the lighting is not turned off.

 REMOTE CONTROL

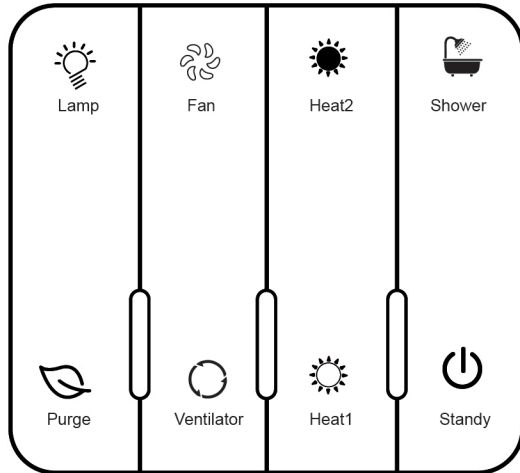

Purge: Start the purification function, 10 minutes of air, 10 minutes of air change, 10 minutes of stop, for 24 hours, purification can be opened under the non-heating function, under the purification function, press any key to exit.



Ventilator: indoor and outdoor air exchange, when the heating function is running (not operable)

WARRANTY

Our warranty plan assures that the products we sell are free from manufacturing defect. for one year from the date of purchase, We will address any issues according to the specified warranty terms. Applicable to items bought from us or authorized dealers, the warranty covers defects, malfunctions, or unusable products, effective from the purchase date and valid for one year. We will replace or refund defective products during this period, excluding misuse, abuse, or normal wear and tear damages. This warranty is non-transferable.

Return Process



Damaged? Wrong item?
Missing Parts?



Get your order information ready, photos will be very helpful.



Contact us.



Our service team will take care of your inquiries accordingly.



At last, we shall provide a suitable solution to you.

COMMON PROBLEM

| Issue | Possible Cause | Solution |
|--|--|--|
| Controller not responding | Connection disconnected | Check power supply and re-pair the code |
| Fan not spinning | Circuit not connected | Check power supply and ensure wiring is correct |
| Excessive noise | Air duct blocked | Clean the air duct and check if the exhaust port is clear |
| Heating function not working Heating function not | Overheat protection triggered | Power off for 10 minutes, then restart |
| Cannot operate except for lighting function not working | Operation locked in purification mode, only lighting can be controlled | Press the power-off button and wait for shutdown, then it can be used normally |
| Fan continues to spin after turning off heating | Cooling protection, fan spins for 20-30 seconds after shutdown | Normal protection |

Valliscó

STEP 5

Please note, before installing the conversion frame ⑨, use a tool to slightly lift the side clips to facilitate easy installation of the panel later. However, avoid applying excessive force when lifting or bending, as this may cause the clips to not seal tightly.



STEP 6

Place the conversion frame into the pre-cut hole and use screws to secure it in place. Ensure the frame is firmly installed by double-checking its stability to avoid any issues.



STEP 10

When installing the panel, align all four sides with the conversion frame and snap them into the pre-set clips.



Note: It is necessary to ensure that all four sides of the panel are simultaneously inserted into the conversion frame.

STEP 11

After the panel installation is completed, peel off the removable protective film. Installation is complete. Use remote control switch to control the machine.

